# NON-LEAK TYPE SOLENOID VALVE

# **SNH Series Non-leak Type Solenoid Valve**

20 to 100 ℓ /min 35MPa



### **Features**

### ①Virtually no internal leakage

A poppet structure minimizes internal leaks from low pressures to as high as 35MPa {357kgf/cm²}.

Enhanced hydraulic circuit efficiency reduces energy needs.

# ②Virtually no pressure loss at high volumes

An original fluid reaction force suppression mechanism is provided for all sizes. Though compact, this valve provides the highest level switching capacity for its class.

### 3High reliability

Since a wet type solenoid valve is used, the movable iron core remains immersed in oil as it moves, which minimizes switching noise and ensures reliable operation. A wet type valve also provides superior water resistance and longer life than a dry type valve.

# 4ISO standard mounting service (01, 03 sizes)

This valve can be ganged together with a modular valve, enabling simple configuration of circuits and an overall compact device configuration.

# **5EC** connector for improved switching (06 size)

During switching, twice the current (starting current) flows to the coil than normal (holding current), which ensures reliable switching operations. The 06 size has compact configuration made possible by an original design that uses a small coil that provides high output, without the need for a large coil.

### **Specifications**

			Mode	el No.	SNH-G01	SNH-G03	SNH-G04	SNH-G06			
				AR		ĎZ ↓ Š A					
,	JIS Symbol		HQ		M A a						
	A2K				A B						
	Maximum Working Pressure  MPa{kgf/cm²}  (P, A, B Ports)			gf/cm²}		35{357}					
Ra	ated	Flow F		Maximum Flow Rate min	AR,HQ;10-20 A2K; 5-20	20-40	40-60	60-100			
Max	ximu	ım Char	ngeover	Frequency (per minute)	120						
Onerating Environment	5	W		Resistance/ esistance Rank	JIS C 0920 IP65 (Dust-tight, Waterjet-proof) (Note 2) IP64 ( Dust-tight, Splash-proof )						
nviro		Ar	nbient	t Temperature		-20 to 50°C					
in in	5 1	Fluid	Ten	nperature Range		-20 to	70°C				
nerat	2	Operating Fluid	Vi	scosity Range		15 to 30	00mm²/s				
	)	å		Filtration		25 micro	ns or less				
	٧	Veigh	t AR/H	HQ (A2K) kg	1.8 (2.2)	5.2	5.5	6.9			
#04			Size	x Length	M5 × 45 (Four)	M8 × 70 (Four)	M8 × 70 (Four)	M10 × 75 (Four)			
Mounting bolt	2	-	·	ning Torque n{kgf·cm}	6 to 8 {61 to 81}	30 to 35 {306 to 357}	30 to 35 {306 to 357}	55 to 60 {561 to 612}			

- Note) 1.Internal leaking does not exceed 1 droplet/minute (0.05cm³/min).
  - 2. The power supply type for  $\mathsf{E}^\star$  is IP64 (dust-tight, splash-proof).
  - 3. For mounting bolts, use 12T or equivalent.
  - 4. Mounting bolts are not included with the 01 size. Bolts are included with the 03, 04, 06 sizes.

#### Handling

- 1 Take care so the B port is not subjected to abnormal surge pressure that is in excess of the maximum operating pressure.
- 2The manual switching (Options M, N) push pin receives B port pressure, so it cannot be pressed with a pressure in excess of about 5MPa {51kgf/cm²}. In the case of the HQ and A2K types, note that leaks are not completely stopped, even in the locked state.
- 3 Use this valve only within the allowable voltage range.
- 4 Use of water- or glycol-based hydraulic operating fluid is standard. Contact your agent about using other fire-resistant hydraulic fluid.
- 5 Always keep the operating fluid clean. Allowable contamination is class NAS12 or less.
- 6 In order to realize the full benefits of the wet type solenoid valve, configure piping so oil is constantly supplied to the B port.
- ☑The coil surface temperature increases if this valve is kept continuously energized. Install the valve so there is no chance of it being touched directly by hand.
- 8 Never try to take this valve apart.
  The cap seal cannot be reassembled without using special tools.


### • Solenoid Assembly Specifications

Solenoid	Power Supply		Frequency	For SNH-G01			For SNH-G03				
Туре	Туре	voltage (v)	(Hz)	Solenoid Coil Type	Current (A)	Power (W)	Allowable Voltage Range (V)	Solenoid Coil Type	Current (A)	Power (W)	Allowable Voltage Range (V)
	E1	AC100	50/60	EAC64-E1	0.37	32	90 to 110	EBB64-E1	0.40	34	90 to 110
	E115	AC110	50/60	EAC64-E115	0.31	30	- 100 to 125 EBB64-E115	EDD64 E115	0.33	31	100 to 125
DC with Built-in		AC115	30/60		0.32	32		0.34	34	100 10 120	
Rectifier	E2	AC200	50/60	EAC64-E2	0.18	32	180 to 220	EBB64-E2	0.22	37	180 to 220
	F000	AC220	F0/00	EAC64-E230	0.15	30	200 to 250	EBB64-E230	0.16	30	200 to 250
	E230	AC230	50/60		0.16	32		EDD04-E230	0.17	33	200 (0 250
DC	D1	DC12		EAC64-D1	2.5	30	10.8 to 13.2	EBB64-D1	2.6	31	10.8 to 13.2
DC	D2	DC24	_	EAC64-D2	1.25	30	21.6 to 26.4	EBB64-D2	1.5	36	21.6 to 26.4

Solenoid	Power Supply	Voltage (V)	Frequency (Hz)	For SNH-G04				
Туре	Туре			Solenoid Coil Type	Current (A)	Power (W)	Allowable Voltage Range (V)	
DC with	E1	AC100	50/60	EBB64-E1	0.40	34	90 to 110	
Rectifier	E2	AC200	50/60	EBB64-E2	0.22	37	180 to 220	
DC	D2	DC24	_	EBB64-D2	1.5	36	21.6 to 26.4	

Solenoid	Power Supply	Voltage (V)	Frequency (Hz)	For SNH-G06					
Туре	Туре			Solenoid Coil Type	Drive Current (A)	Holding Current (A)	Holding Power (W)	Allowable Voltage Range (V)	
DC with	E1	AC100	50/60	EBB64-D60	0.71	0.36	33.2	90 to 110	
Rectifier	E2	AC200	50/60	EBB64-D120	0.39	0.19	36.4	180 to 220	
DC	D2	DC24	_	EBB64-D17	3.0	1.5	37.4	21.6 to 26.4	

### **Understanding Model Numbers**

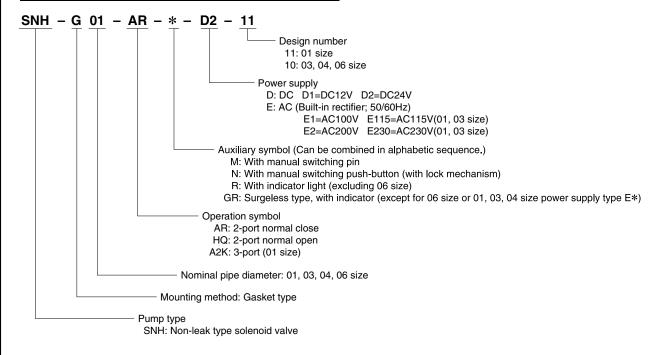


# **Options**

### (Auxiliary Symbol)

- Select options in accordance with size, as shown in the table to the right.
  - (1) The 06 size has an EC connector and a built in surge killer as standard. However, an indicator light is not provided because of space considerations.
  - (2) Option N increases the measurement by the size of the pushbutton only.

Auxiliary symbol Size	М	N	R	GR
01	0	0	0	0
03	0	0	0	0
04	0	0	0	0
06	0	0		_

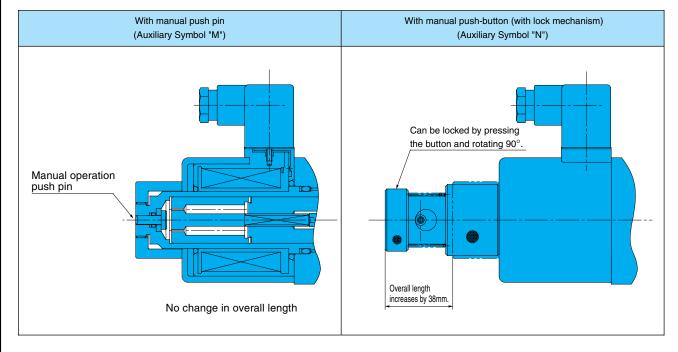


# **Electrical Circuits**


• These electrical circuits are for sizes 01, 03, 04. An EC connector is used for size 06. See the next page for more information.

Valve	Connector Type	Wiring	Electrical Circuit Diagram
	EA41-1A (Standard for power supply type D*)	Connect the power supply to terminal No.1 and No.2. The terminal is ground Use this terminal a required.	s d.
	EA41-DR1/2-1C (D* option: R)	Connect the power supply to terminal No.1 and No.2. The  terminal is ground Use this terminal a required.	s d.
G01 G03 G04 Size	EA41-GRD1/2-1C (D* option: GR)	PG11	COM Z ±
	EA42-1B (For power supply type E*)	Connect the power supply to the terminal on the board.  When ground cornection is required terminal	50/60Hz
	EA42-R1/2-1B (E* option: R)	remove the board an use the ⊕ terminal. I this case, do not cornect the power supplied to the No. 1 and No. terminals.	n com

- Note) 1.Connector types 1 and 2 indicate voltage. (1: 100V AC or 12V DC; 2: 200V AC or 24V DC)
  - 2.Use a connector cord with a diameter that is in the range of  $\phi 8$  to  $\phi 10$ .
  - 3. The orientation of the connectors can be changed in  $90^\circ$  increments by modifying the terminal block.
  - 4. The cover cannot be removed unless the installation screws are removed.
  - 5.Use an M3 type as a solderless terminal.
  - $6. Tighten the \, M3 \, screws \, that \, secure \, connectors \, and \, terminals \, to \, a \, torque \, of \, 0.3 \, to \, 0.5 Nm \, (3 \, to \, 5.1 kgf-cm).$


 06 Size EC Connector SNH-G06 provides large switching power, so an EC connector is used.
 During switching, this EC connector supplies twice the current (starting current) that normally flows to the coil (holding current), and drops the current back to normal after switching is complete.

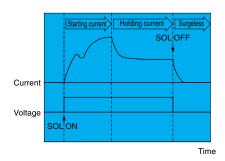

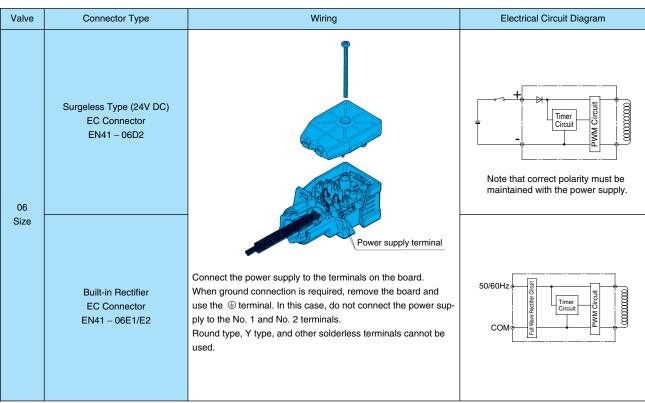



Note) The orientation of the EN41-06\*\* connector cannot be changed at 90° intervals by modifying the terminal block.

# **Installation Dimension Drawings**

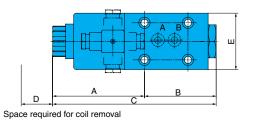

Rotatable 360° (Note 2)



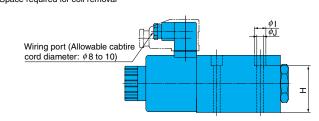



#### **Dimension Table**

Size	Α	В	С	D	Е	F	G(Note)2	Н	Т	J
01	100	60.5	160.5	60.5	46	48	91 (94.5)	37.5	9	5.5
03	114	89	203	63	70	72	112 (115.5)	58	14	8.5
04	132	71	203	63	75	71	112 (115.5)	58	14	8.5
06	137	82	219	63	85	71	115.5	60	18	11


- Note) 1.The 01, 03, 04 size power supply type E\* allows rotation at 90° intervals, but the 06 size cannot be rotated.
  - 2. Values in parentheses are for 01, 03, 04 size power supply type E\*.
  - 3.The P and T ports of the 01, 03 sizes do not have O-ring grooves, so if the manifold has P and T ports, use end plates to close off the valve P and T ports. Contact your agent for information about end plates.


### Valve Mounding Surface Dimensions

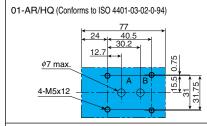

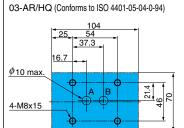


Note)An M6 mounting screw type is not yet available.

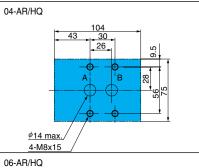


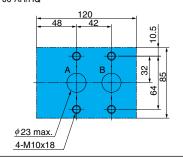

SNH-G\*\*-HQ-\*\*-10

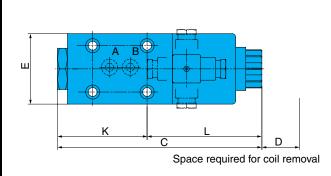


#### Rotatable 360° (Note 1)

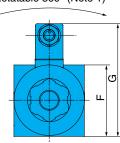

### Dimension Table

Size	С	D	Е	F	G(Note)2	K	L
01	160.5	60.5	46	48	91 (94.5)	70.5	90
03	203	63	70	72	112 (115.5)	89	114
04	203	63	75	71	112 (115.5)	83	120
06	219	63	85	71	115.5	100	119

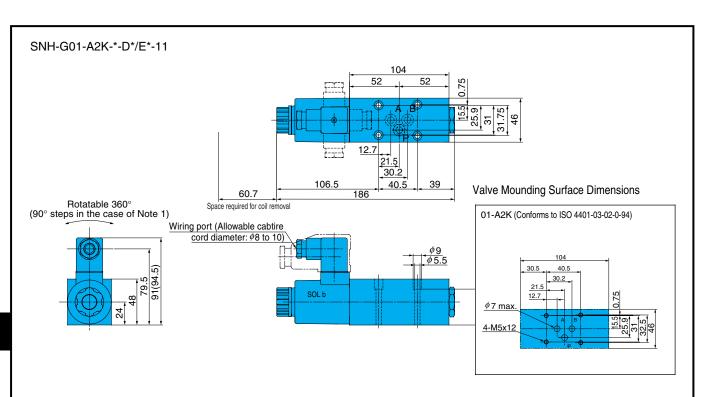


Note) 1.Power supply type E\* allows rotation at 90° intervals. 2.Values in parentheses are for power supply type E\*.


# **Performance Curves**

### Hydraulic Operating Fluid Viscosity 32mm<sup>2</sup>/s

### Pressure Loss Characteristics

Size Flow Path	01	03	04	06
A↔B	а	b	С	d
P↔A, P↔B	а	_	_	_

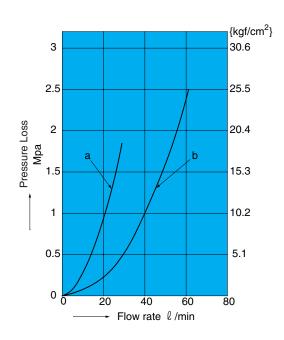

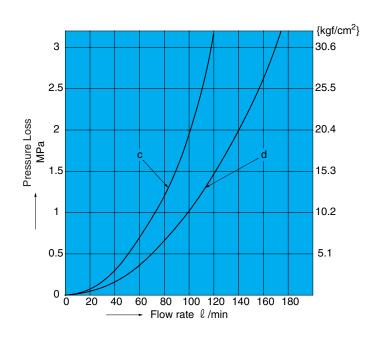


#### Pressure - Flow Volume Allowable Value G01 Size G03 Size A: $AR(A\rightarrow B)$ B: $AR(B\rightarrow A)$ C: $HQ(A\rightarrow B)\&(B\rightarrow A)$ D: $A2K(P\rightarrow A,B)\&(A,B\rightarrow P)$ A: $AR(A\rightarrow B)$ B: $AR(B\rightarrow A)$ C: $HQ(A\rightarrow B)\&(B\rightarrow A)$ 120 60 Flow rate $\ell$ /min 40 В В С С 20 40 D 20 {204} 30 {306} 20 {204} 0 0 {102} {102} Pressure MPa{kgf/cm²} Pressure MPa{kgf/cm²} Note) Available flow rate values depend on pres-SNH-G04-AR/HQ SNH-G06-AR/HQ sure and fluid flow direction. 200 250 The following shows how to read the data. A: AR(A-B) B: AR(B-A) C: HQ(A-B)&(B-A) A: AR(A-B) B: AR(B-A) C: HQ(A-B)&(B-A) 180 225 $A : AR (A \rightarrow B)$ 160 200 175 140 Oil flow from A port to B port Flow rate 100 100 Flow rate %/min 125 Valve operation symbol 100 80 С Indicates curve 60 75 40 50 20 25

10 15 20 25 30 35

{51} {102} {153} {204} {255} {306} {357}

→ Pressure MPa{kgf/cm²}

### Switching Response Time

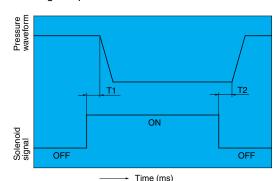

10 15 20 25 30 35

{51} {102} {153} {204} {255} {306} {357}

➤ Pressure MPa{kgf/cm²}

Pressure : 35MPa{357kgf/cm²} Flow Rate : 01 : 20  $\ell$  /min 03 : 40  $\ell$  /min 04 : 60  $\ell$  /min


 $06:100\;\ell\;\text{/min}$  Operating Fluid : ISO VG68

Size	Power	Response	Time (sec)
Size	supply	T1(ON)	T2(OFF)
01	D*	0.03 to 0.05	0.04 to 0.06
O1	E*	0.04 to 0.06	0.08 to 0.10
03	D*	0.06 to 0.08	0.04 to 0.06
03	E*	0.07 to 0.09	0.08 to 0.10
04	D*	0.09 to 0.11	0.06 to 0.08
04	E*	0.12 to 0.14	0.14 to 0.16
06	D*	0.04 to 0.06	0.06 to 0.08
00	E*	0.09 to 0.11	0.14 to 0.16


Note) The switching response time changes slightly with operating conditions (pressure, flow rate, viscosity, etc.)

# **Cross-sectional Drawing**


SNH-G01-AR-\*\*-11

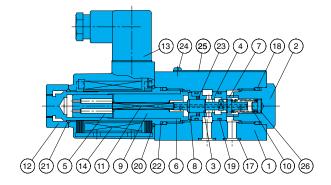

SNH-G01-HQ-\*\*-11

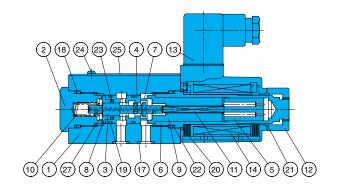


SNH-G01-A2K-\*\*-11

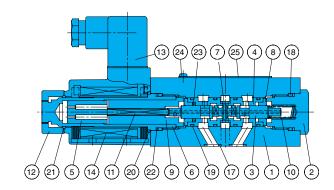


03 SNH-G04-AR-\*\*-10 06

Part No.	Part Name	Part No.	Part Name
1	Body	15	Coil case
2	Plug	16	Coil yoke
3	Poppet	17	O-ring
4	Sleeve	18	O-ring
5	Plunger	19	O-ring
6	Solenoid guide	20	O-ring
7	Ring	21	O-ring
8	Collar	22	Backup ring
9	Solenoid stopper	23	Cap seal
10	Spring	24	Cross recessed head small screw
11	Rod	25	Nameplate
12	Nut	26	Stopper
13	Connector	27	Retainer
14	Solenoid coil		

03 SNH-G04-HQ-\*\*-10 06

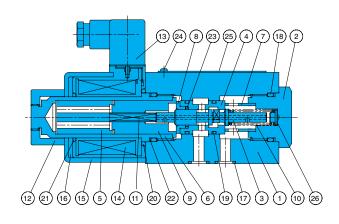

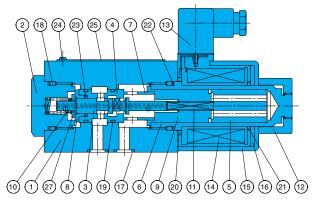

### List of Sealing Parts

Part No.	Part Name	01	03	04	06	Q'ty	
T all IVO.	Tarrivanie	01	03	04	00	AR, HQ	A2K
17	O-ring	IB-P9	IB-P12	IB-P16	IB-P28	2	3
18	O-ring	IB-P22	IB-P32	IB-P32	IB-P32	2	2
19	O-ring	AS568-017(HS90)	IB-P22	IB-P24	IB-P26	2	4
20	O-ring	S-25	AS568-029	AS568-029	AS568-029	1	1
21	O-ring	1A-P20	AS568-026	AS568-026	AS568-026	1	1
22	Backup ring	T2-P22	T2-P32	T2-P32	T2-P32	2	2
23	Cap seal	*	*	*	*	1	1

Note) O-ring 1B-\*\* refers to JIS B2401-1B. Backup ring T2 indicates JIS B 2407-T2.

\*Parts marked by an asterisk "\*" are not available on the market. Contact your agent for more information.